

CARE & CLEANING



For installation questions, contact our
Technical Director at **419-866-7705, ext 1033**.
For all other inquiries, call us at **704-762-1911**

REMEMBER, VINYL IS NOT GLASS!

DO NOT USE: ANY harsh cleaners NO formulas containing bleach or ammonia OR professional pressure cleaners

REMOVE any jewelry from hands before cleaning to avoid puncturing vinyl

DO NOT spray any Porch Conversion product with a hose or pressure washer. No matter how gentle you think you are being, you can easily damage the product and cause leaks.




STEP 1: COOL, REMOVE DIRT & DEBRIS

- ✓ Allow sashes to cool before washing.
- ✓ Thoroughly vacuum all areas of window frame and screens using the soft brush attachment to remove any loose dirt or dust.

STEP 2: REMOVING SASHES


Note: Porch Conversions Windows have no moving parts and vinyl sashes are spring loaded for easy removal.

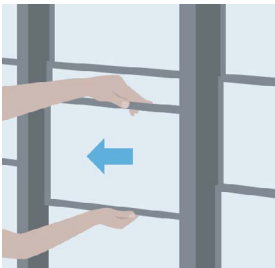

- ✓ Remove sashes from main frame by compressing springs to the left and lift out the right side from the shallow depth frame liner.
- ✓ For Horizontal Sliders, move sashes to the middle and gently lift them up, tilt the bottom out and lower down to remove.

STEP 3: CLEANING

- ✓ After removing sashes, gently rinse under water to remove excessive dirt or other debris. For fixed units, **DO NOT** rinse them with a hose, use a micro fiber cloth that is well saturated with water to remove excessive dirt or other debris.
- ✓ Wash both sides of vinyl sashes using a soft, lint free cloth and a mixture of warm water and Woolite® or Murphy Oil Soap® (one cap-full to one gallon of water).
- ✓ Finish by lightly spraying a small amount of our Porch Conversions Vinyl Preserver on a cloth, then apply to both sides of sashes. Wipe with a dry, lint free cloth. Preserver is available from your Porch Conversions distributor.

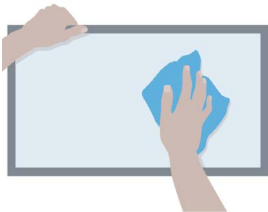

1 cap of Woolite or
Murphy Oil Soap
+
1 gallon of water



Vinyl
preserving
spray

STEP 4: INSERTING SASHES

Note: Sashes are all the same size allowing them to be inserted in to the window frame in any order.

- ✓ Top sash goes in the track closest to screen.
- ✓ The spring side of the sash goes in the deep liner side track first (left side as facing the window unit from interior of your room), then push into track to have the other side pop into the shallow liner side.
- ✓ Overlap the sashes when putting them in to the tracks, so the sashes interlock properly.
- ✓ Each sash will have its own track. Once all installed they will slide all the way up and down.
- ✓ For Horizontal Sliders, reverse the removal process listed above.